











Quick Reference

Basic Functions



		CLEAR & RESET THE SYSTEM	The system is cleared and all selections are turned off. A new input sequence can be entered by selecting a key (e. g. instructor or any student) who becomes the transmitter. Then select the keys of the receivers of this screen image, e. g. Student 1.
		INSTRUCTOR TO ALL	All students receive the instructor's screen image (if there is no other transmitter selected). The instructor's screen is automatically set as transmitter.
 ... 		INSTRUCTOR TO STUDENT 3	Press INSTR. + S3 to select the instructor as transmitter. Student 3 will receive the instructor's screen image. Other students may also be added to this selection as receivers.
		VIEW STUDENT'S WORK	Student 1 is selected as transmitter and the instructor is automatically set as receiver. If there was still any transmitter selected when pressing S1, student 1 will be selected as receiver.
 ... 		STUDENT 1 TO ALL	Press S1 + ALL to select Student 1 as transmitter, and the instructor and all other students will receive his screen image.
		BLANK SCREEN	To blank any screen press BLANK and select student(s) key to blank the screens. All screens are blanked when BLANK and ALL are pressed. The instructor remains the transmitter and his screen is active and can still be displayed onto the projector screen.
 + 		VIDEO SCANNER	Hold down the ALT key while pressing the ALL key. The instructor receives all students' screens sequentially for about 3 seconds. To increase the time delay hold the ALT key pressed down.

The instructor's and the student's keys may have a choice of 3 functions: Off, transmit and receive.

The first key selected after VIDEO OFF becomes the transmitter. The next keys selected become the receivers. Hit a receiver's key again to deselect it.

The transmitter is indicated by flashing light, receivers by permanent light.

To select a new transmitter, hold the key pressed down for about 1 second or reset the system (VIDEO OFF) and start a new input sequence.

Manufacturer:

EBS Euchner Büro- und Schulsysteme GmbH
Ernst-Leitz-Straße 3 · D - 63150 Heusenstamm (Germany)
Tel.: +49 61 04-33 13 · Fax: +49 61 04-17 83
E-Mail: info@ebs-euchner.com · www.ebs-euchner.com