

Quick Reference

Optional Functions



NOTEBOOK

The Notebook's screen can be broadcasted to a single student, a group or all students as well as the projector.



PROJECTOR, LCD

To activate the projector. The current transmitter is displayed onto the projector screen. The projector is not affected by the blank function.



REMOTE CONTROL STUDENT 1

When the instructor views a student's screen (e. g. student 1) he gains control of the keyboard and mouse when the REMOTE key is pressed. In this mode both, the instructor and student's keyboards & mice, are active.



REMOTE CONTROL ALL

To control all the students' keyboards and mice hold down the ALT FUNCT key while pressing the REMOTE key. One student's screen must first be transmitted to the instructor. The remote key will flash. This can only operate when all systems are in the same application, and in the same mode!



DISABLE MOUSE AND KEYBOARD

Press KEYB. LOCK to lock the keyboard and mouse of the students selected by the instructor.



LOCK ALL

Hold down the ALT FUNCT key while pressing the KEYB. LOCK. All student's screens and mice are locked. There is no video transmission required. The KEYB. LOCK is flashing to indicate the lock all mode.



SCREEN ACCESS

This will allow any student by pressing their HELP button to receive the instructor's screen for guidance. Any number of students can access this function at the same time.



BEAMER / NOTEBOOK

Press to activate the projector. The instructor's videosignal is displayed onto the projector screen.



INSTRUCTOR TO BEAMER/NOTEBOOK

Press to displays the notebook's screen directly onto the projector. This operates independent from other keyboard functions (e.g. INSTRUCTOR to ALL).

Manufacturer:

EBS Euchner Büro- und Schulsysteme GmbH
 Ernst-Leitz-Straße 3 · D - 63150 Heusenstamm (Germany)
 Tel.: +49 61 04-33 13 · Fax: +49 61 04-17 83
 E-Mail: info@ebs-euchner.com · www.ebs-euchner.com