

Quick Reference

6 keys control all functions



videodidact[®] Show



PROJECTOR NOTEBOOK

Displays the notebook screen directly onto the projector.

VIDEO OFF will **not** turn off this function!

Press the key again or replace it by the function PROJ. INSTRUCTOR.

NOTEBOOK

The notebook's screen can be broadcast to all students' monitors as well as the projector.

VIDEO OFF

Press to clear the system.

PROJECTOR INSTRUCTOR

Displays the instructor's screen directly onto the projector.

VIDEO OFF will **not** turn off this function!

Press the key again or replace it by the function PROJ. NOTEBOOK.

BLANK

To blank all students' monitors. The instructor's screen can still be displayed onto the projector.

INSTRUCTOR

Broadcast from the instructor to all students' monitors.

Press the key for 2 sec. to release the screen access function.



Screen Access Option

Due to the previous release of the instructor this function enables each student to mutually view the instructor's or the student's own screen.

Manufacturer:

EBS Euchner Büro- und Schulsysteme GmbH
Ernst-Leitz-Strasse 3 · 63150 Heusenstamm · Germany
Phone: +49-61 04-33 13 · Fax: +49-61 04-17 83
e-mail: info@ebs-euchner.com · www.ebs-euchner.com